

## **2013 Fish Passage Plan Section 3 – The Dalles Dam**

### **Table of Contents**

1. Fish Passage Information .....	TDA-01
1.1. Juvenile Fish Passage.....	TDA-01
1.2. Adult Fish Passage.....	TDA-07
2. Project Operation .....	TDA-08
2.1. General.....	TDA-08
2.2. Spill Management .....	TDA-08
2.3. Total Dissolved Gas Management and Control ... ..	TDA-08
2.4. Juvenile Fish Passage Facilities .....	TDA-09
2.5. Adult Fish Passage Facilities .....	TDA-10
3. Facility Monitoring and Reporting.....	TDA-13
3.1. Inspections.....	TDA-13
3.2. Zebra Mussel Monitoring .....	TDA-14
3.3. Reporting .....	TDA-14
4. Fish Facilities Maintenance .....	TDA-15
4.1. General.....	TDA-15
4.2. Juvenile Fish Passage Facilities .....	TDA-15
4.3. Adult Fish Passage Facilities .....	TDA-17
5. Turbine Unit Operation and Maintenance .....	TDA-19
6. Dewatering Plans.....	TDA-20
6.1. Guidelines for Dewatering and Fish Handling Plans.....	TDA-20
6.2. Juvenile Bypass Systems .....	TDA-21
6.3. Adult Fish Ladder .....	TDA-21
6.4. Powerhouse Collection System Routine Maintenance .....	TDA-22
6.5. Turbines .....	TDA-22
7. Forebay Debris Removal .....	TDA-22
8. Response to Hazardous Materials Spills.....	TDA-23
9. Endnotes.....	TDA-23

---

**Section 3     The Dalles Dam**

---

**1. FISH PASSAGE INFORMATION**

The locations of fish passage facilities at The Dalles Dam are shown on **Figures TDA-1** through **TDA-4**. Dates for project operations for fish purposes and special operations are listed in **Table TDA-1**.

**1.1. Juvenile Fish Passage.**

**1.1.1. Facilities Description.** Turbine units at The Dalles Dam are not screened. Juvenile fish passage consists of the Ice & Trash Sluiceway and one 6” orifice in each gatewell. All 6” orifices will be closed as units are dewatered. The Ice & Trash Sluiceway is a rectangular channel extending along the total length of the 22-unit powerhouse and is located in the forebay side of the powerhouse. When any of the sluiceway gates (located in the forebay side of the sluiceway) are opened, water and juvenile migrants are skimmed from the forebay into the sluiceway and deposited in the tailrace downstream of the project.

**1.1.2. Juvenile Migration Timing.** The primary juvenile fish passage period at The Dalles Dam is April through November. Juvenile migration timing is monitored at the John Day Dam Smolt Monitoring Facility, and the 10-year passage timing data is reported in **Table JDA-2** in **Section 4** (John Day Dam) of the Fish Passage Plan. No juvenile monitoring is done at The Dalles Dam; therefore, refer to this table and add approximately 1 day to the dates to estimate juvenile fish arrival at The Dalles Dam.

**1.1.2.1.** Diel passage at The Dalles Dam sluiceway is affected by spill and flow conditions. In years of consistently high flow and spill, fish may be distributed higher in the water column and daytime passage may increase.

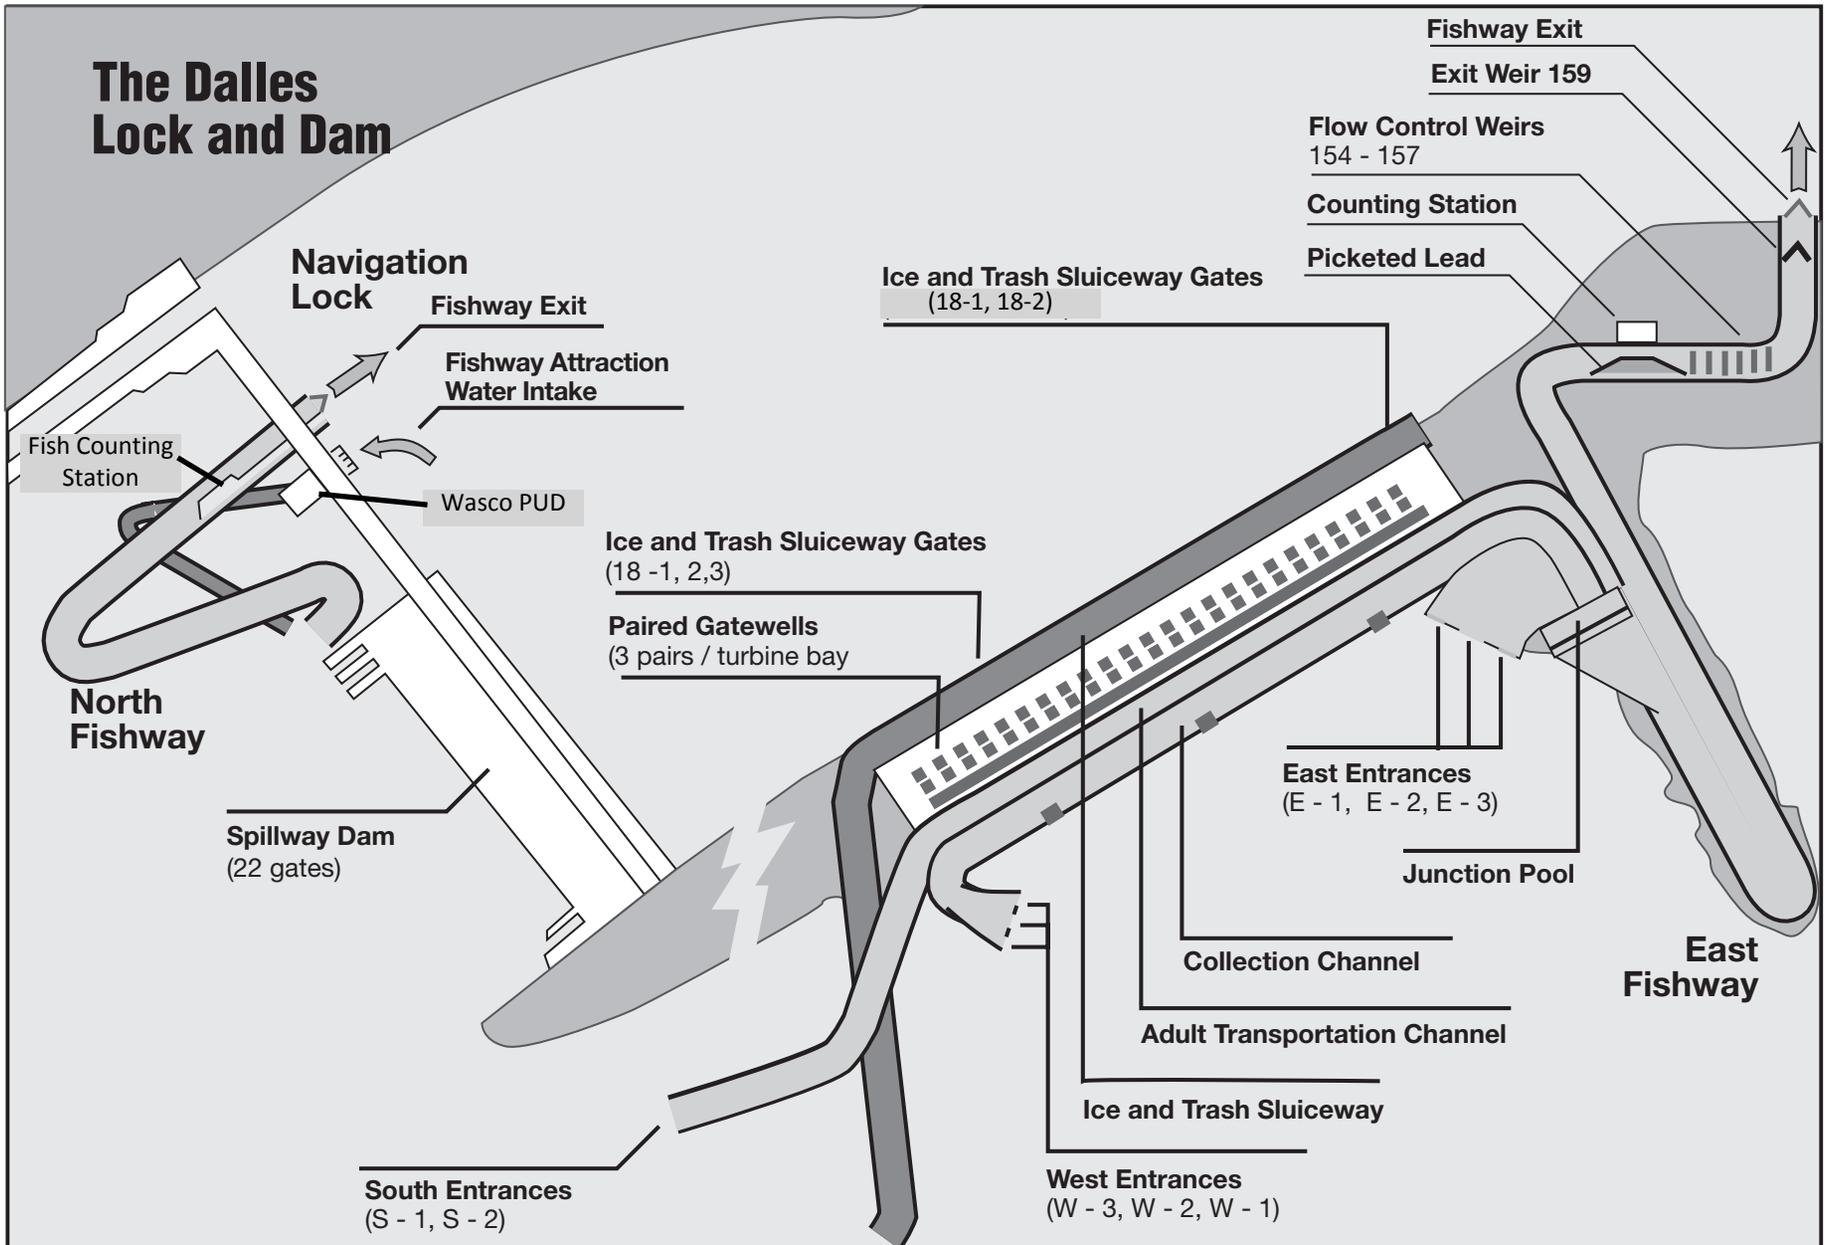


Figure TDA-1. The Dalles Dam.

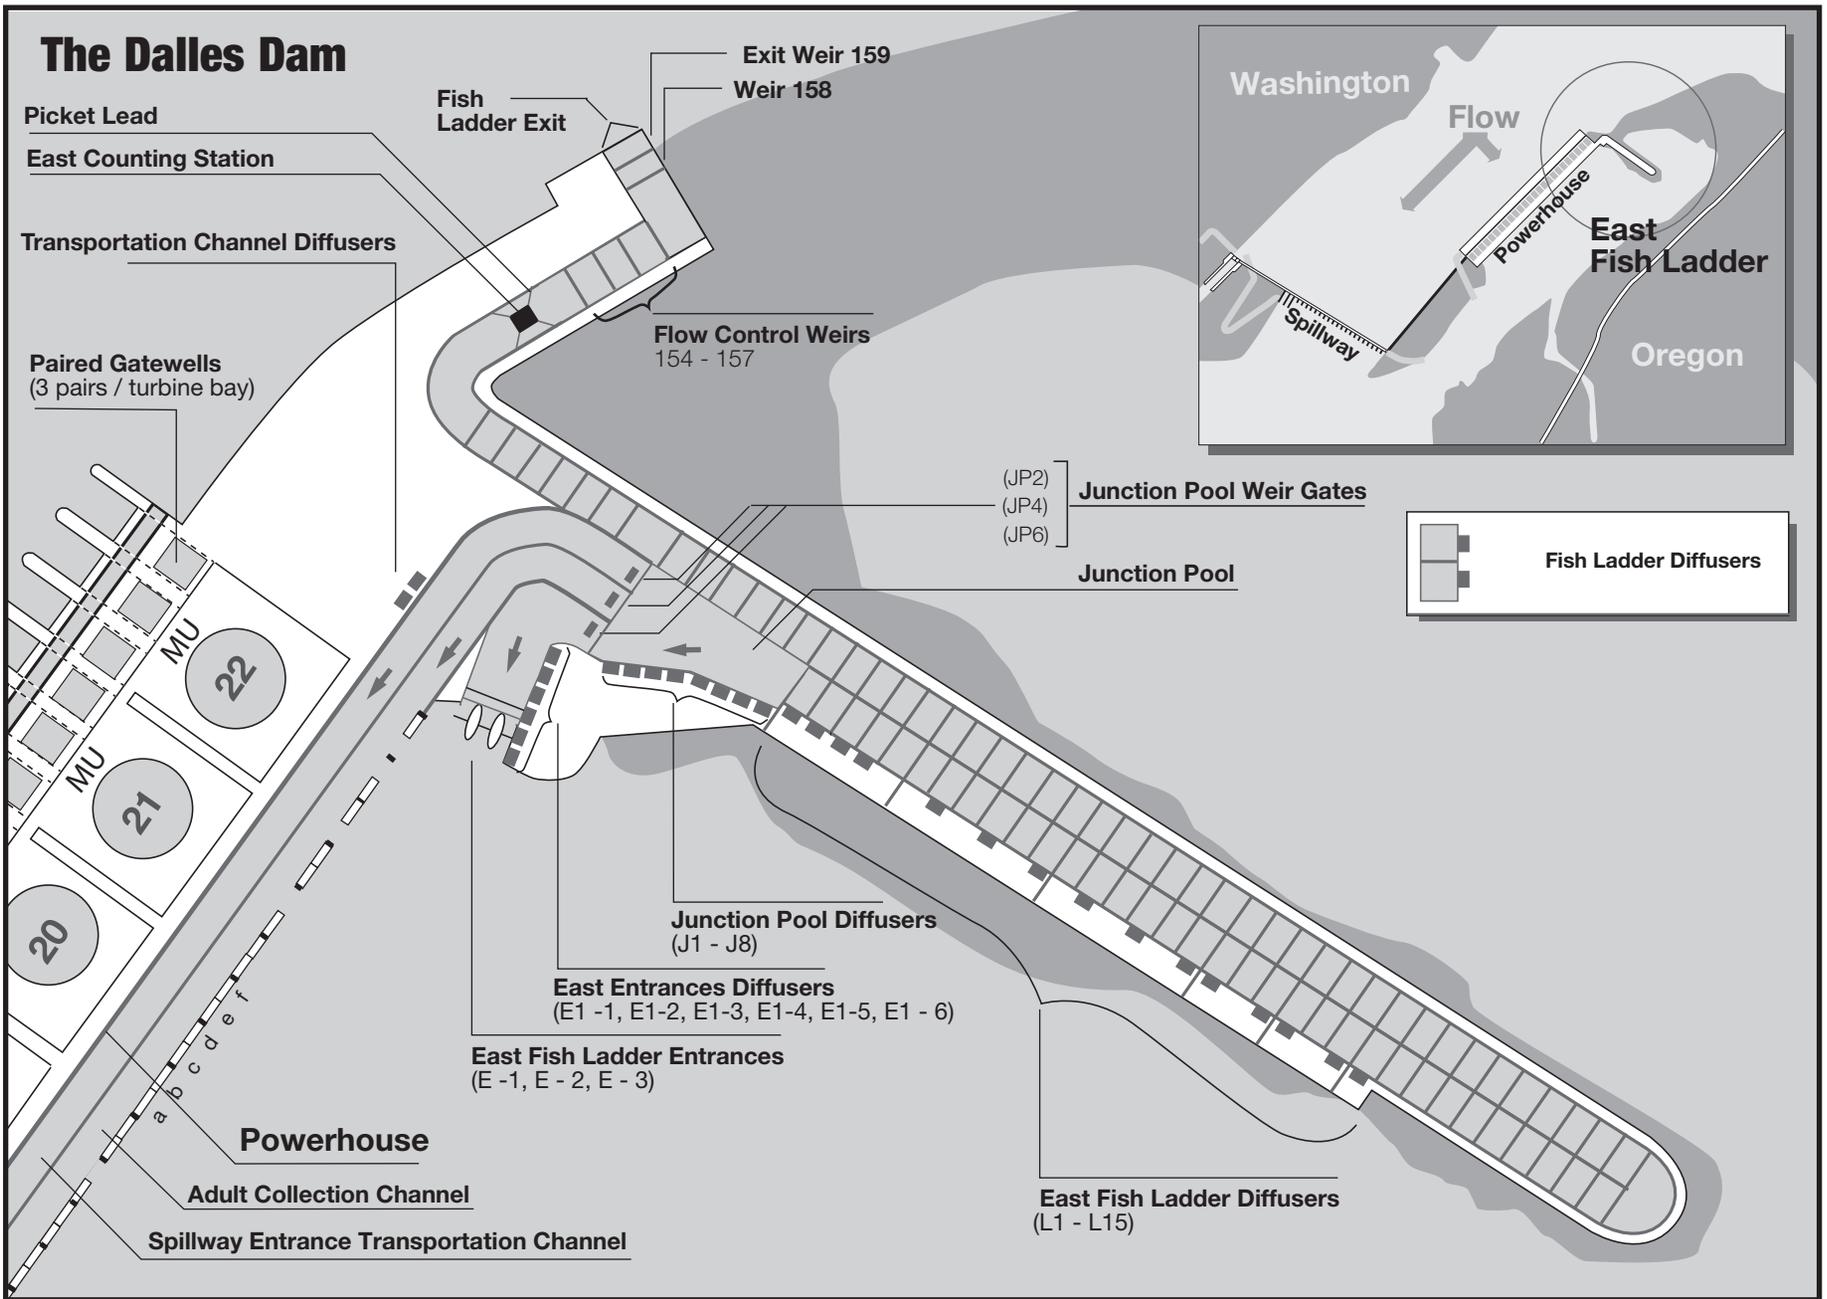


Figure TDA-2. The Dalles Dam East Fish Ladder.

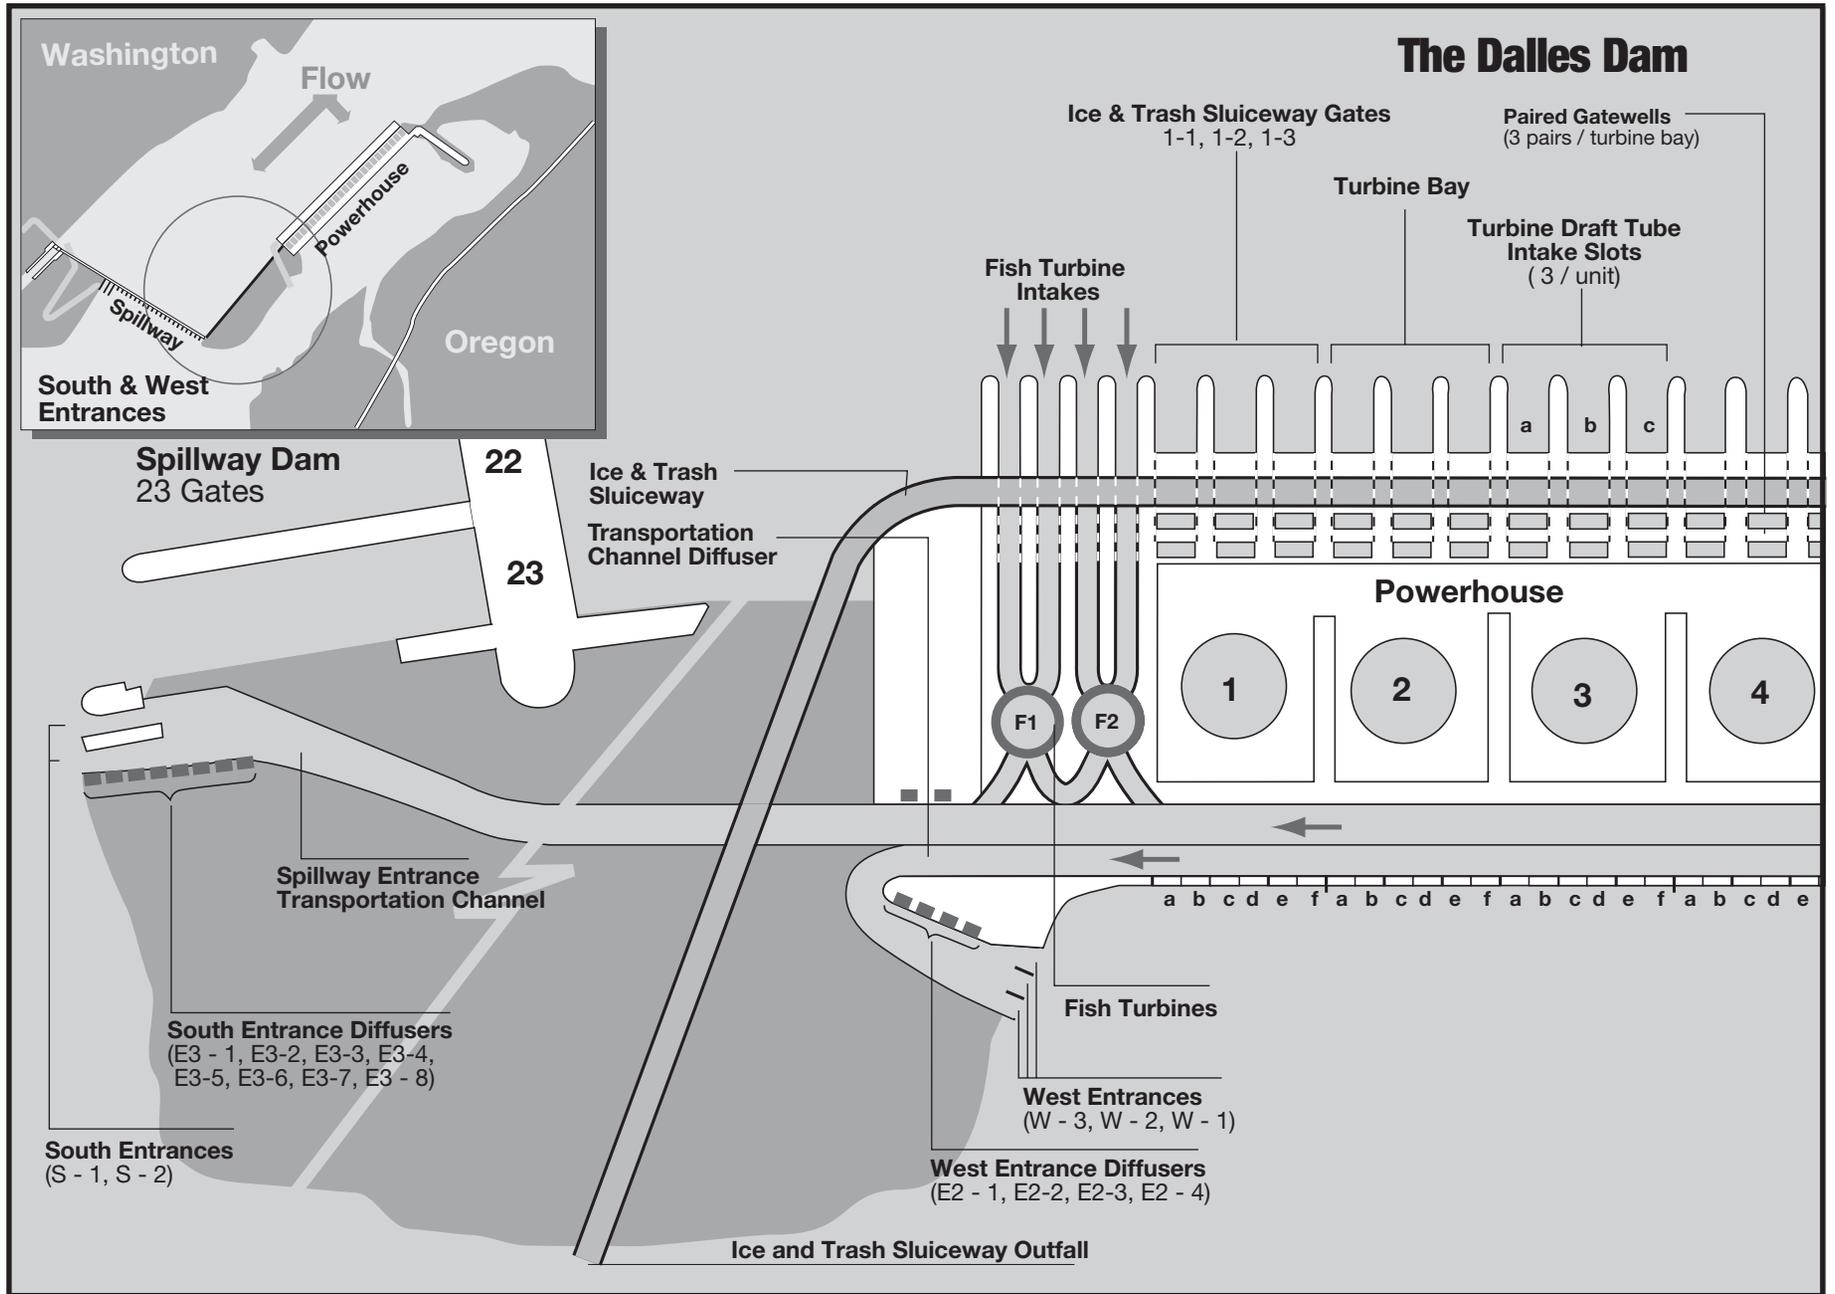


Figure TDA-3. The Dalles Dam South and West Fish Ladder Entrances.

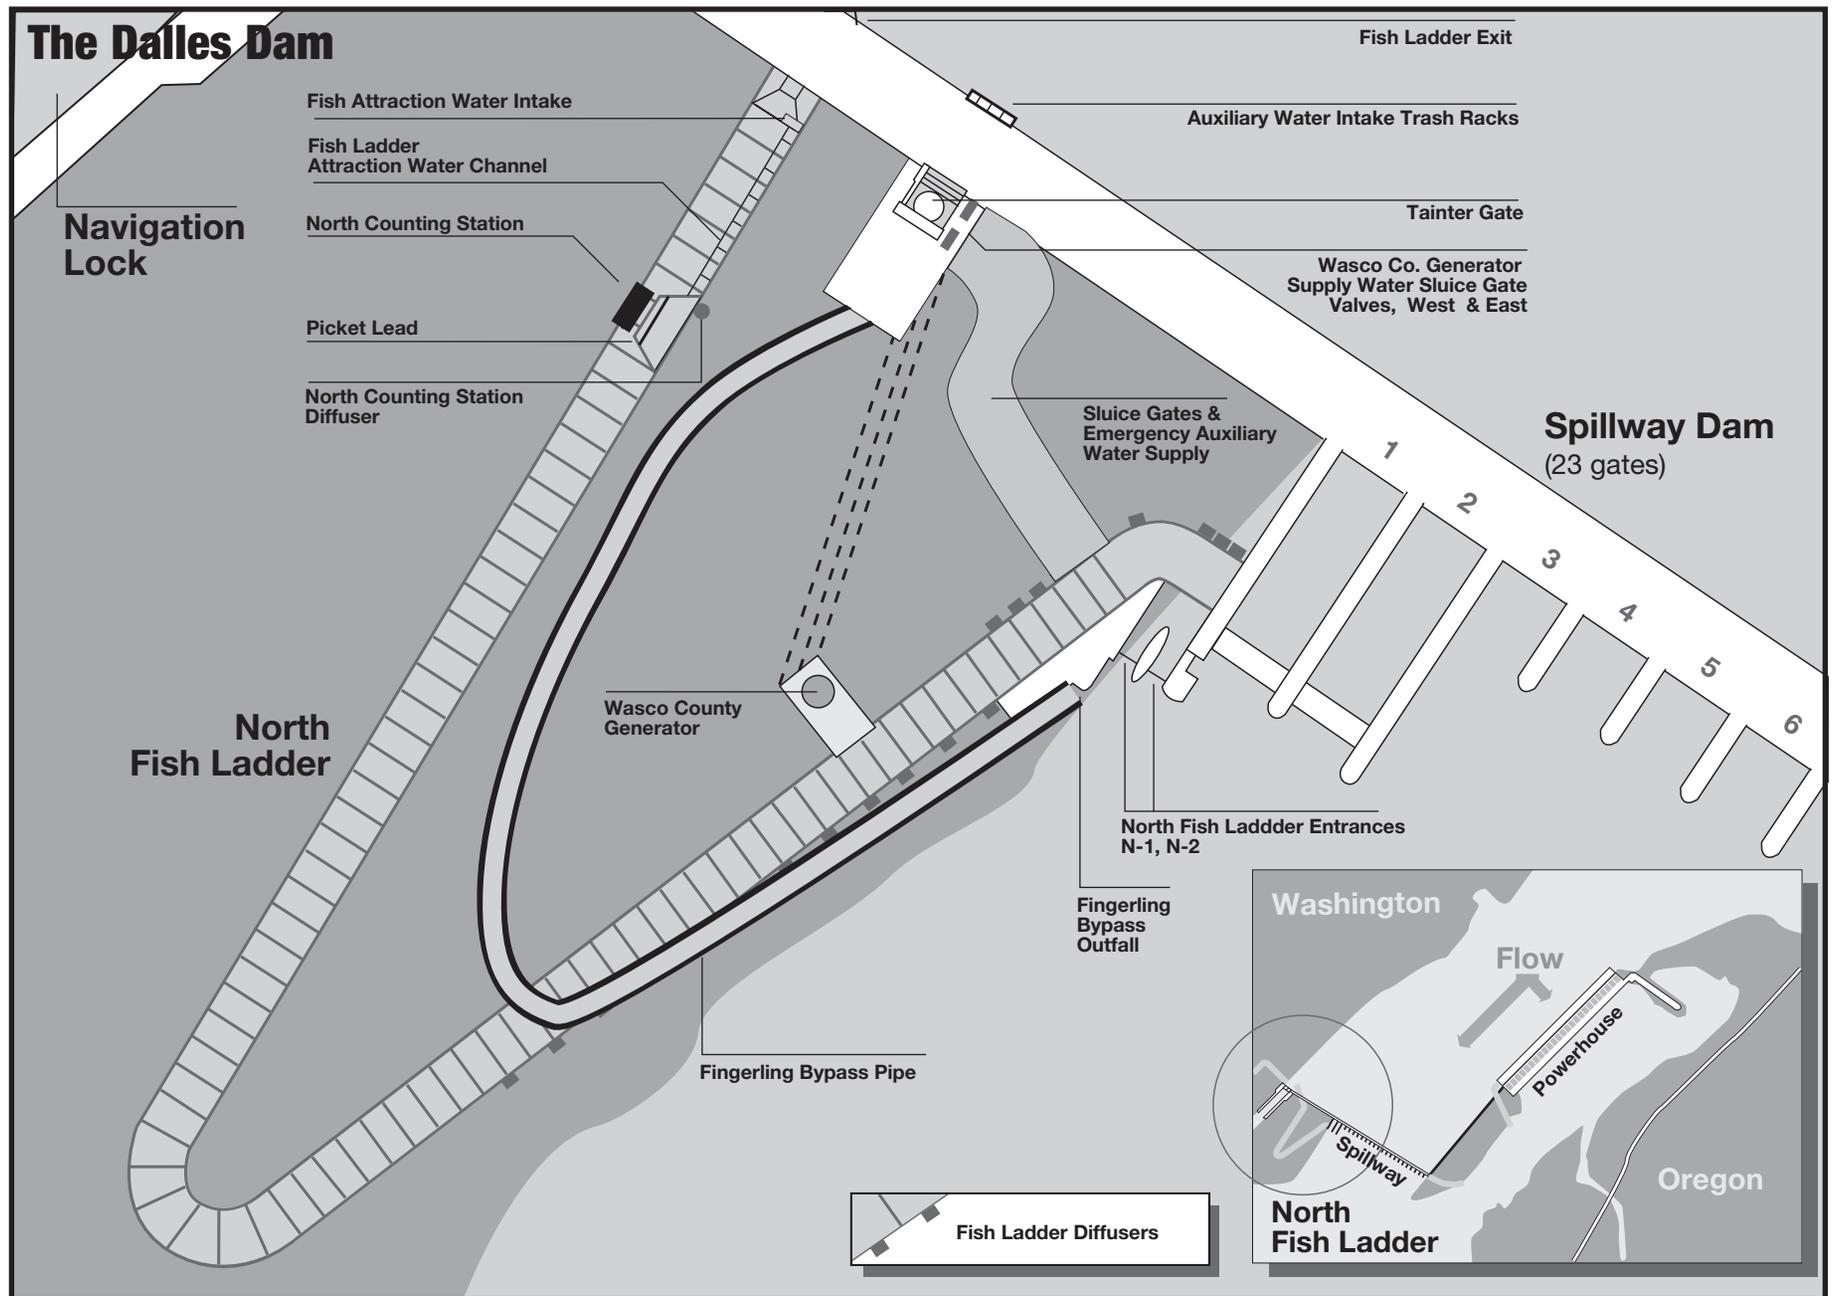


Figure TDA-4. The Dalles Dam North Fish Ladder and Spillway.

**Table TDA-3. The Dalles Dam Dates of Fish-Related Operations for 2013 Fish Passage Season and 2013/14 Winter Maintenance Period.**

Task Name	Start	Finish	Reference	2013												2014		
				1st Quarter			2nd Quarter			3rd Quarter			4th Quarter			1st Quarter		
				Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec	Jan	Feb	Mar
<b>2013 FISH PASSAGE SEASON</b>	<b>3/1/13</b>	<b>11/30/13</b>	<b>TDA 2</b>															
Juvenile Fish Passage Season	4/1/13	11/30/13	TDA 2.4.1.2															
Adult Fish Passage Season	3/1/13	11/30/13	TDA 2.5.1.2															
<b>2013-2014 WINTER MAINTENANCE PERIOD</b>	<b>12/1/13</b>	<b>3/31/14</b>	<b>TDA 2</b>															
Juvenile Fish Facilities Winter Maintenance	12/1/13	3/31/14	TDA 2.4.1.1															
Adult Fish Facilities Winter Maintenance	12/1/13	2/28/14	TDA 2.5.1.1															
<b>ADULT FISH COUNTING</b>	<b>4/1/13</b>	<b>10/31/13</b>	<b>Table TDA-1</b>															
Visual 0500 - 2100 DST	4/1/13	10/31/13																
Video Night 2100 - 0500 DST	6/15/13	9/30/13																
<b>1% CONSTRAINTS (YEAR-ROUND)</b>	<b>3/1/13</b>	<b>2/28/14</b>	<b>TDA 5.4</b>															
1% soft constraint	3/1/13	3/31/13																
1% hard constraint	4/1/13	10/31/13																
1% soft constraint	11/1/13	2/28/14																
<b>TDG MONITORING (YEAR-ROUND)</b>	<b>3/1/13</b>	<b>2/28/14</b>	<b>TDA 2.3</b>															
TDG Monitoring - Tailrace	3/1/13	2/28/14	TDDO															
TDG Monitoring - Forebay	4/1/13	8/31/13	TDA															
<b>SPECIAL OPERATIONS &amp; STUDIES</b>	<b>3/1/13</b>	<b>10/31/13</b>	<b>Appendix A</b>															
Adult Lamprey Studies	3/1/13	8/31/13	App A TDA 2.1															
Adult Salmon Studies	3/20/13	10/31/13	App A TDA 2.2															
Operation of Ice & Trash Sluiceway	3/1/13	12/15/13	TDA 2.4.1.2.e															
<b>AVIAN ABATEMENT MEASURES</b>	<b>4/1/13</b>	<b>12/1/13</b>	<b>TDA 2.4.1.1.e</b>															
Avian Predator Control Lines	4/1/13	12/1/13																
Avian Hazing	4/15/13	7/31/13																
<b>SPILL FOR FISH PASSAGE</b>	<b>4/10/13</b>	<b>8/31/13</b>	<b>Appendix E</b>															
Spring Spill - 40%	4/10/13	6/30/13																
Summer Spill - 40%	7/1/13	8/31/13																
Weekly Reports (year-round)	3/1/13	2/28/14	TDA 3.3.1															
Annual Report (for Dec 1, 2012 - Nov 30, 2013)	1/31/14	1/31/14	TDA 3.3.4															

## 1.2. Adult Fish Passage.

**1.2.1. Facilities Description.** Adult fish passage facilities at The Dalles Dam are composed of a north shore fish ladder, which passes fish collected at the north end of the spillway, and an east fish ladder that passes those fish collected at the south end of the spillway and across the downstream face of the powerhouse.

**1.2.1.1.** A small hydropower facility, utilizing the north fishway ladder auxiliary water supply, was constructed in 1991 and is operated by the North Wasco PUD. Adult fishway criteria associated with this facility are monitored and maintained during the daily fishway inspections. A backup auxiliary water supply system, unscreened for juveniles has been upgraded to facilitate its use if required.

**1.2.2. Adult Migration Timing and Counting.** Upstream migrants are present at The Dalles Dam throughout the year and adult passage facilities are operated year round. Adult salmon, steelhead, and lamprey are normally counted from April 1 through October 31 (**Table TDA-2**), and these data appear daily on the Corps adult count website at: <http://www.nwp.usace.army.mil/Missions/Environment/Fishdata.aspx>. Migration timing data for these species appear in **Table TDA-3**. Sturgeon and bull trout are also counted and recorded on the fish counters' daily summary sheet comments section, but do not appear daily on the Corps website total due to relative infrequency of passage. These data are posted periodically during the passage season in the Miscellaneous Fish Counts report on the Corps' website, and summarized in the Annual Fish Passage Report.

**1.2.2.1.** The adult fish counting schedule is shown in **Table TDA-1**.

**Table TDA-2. Adult Fish Counting Schedule at The Dalles Dam.**

Count Period	Counting Method and Hours <sup>1</sup>
April 01 – October 31	Visual 0500–2100 hours (DST)
June 15 – September 30	Night Video 2100–0500 hours (DST)

1. In 2013, daylight saving time (DST) is in effect from March 10–November 3, and hours are adjusted forward one hour from Pacific Standard Time (PST). DST = PST+1.

**1.2.2.2.** Annual winter maintenance of adult fish facilities is scheduled from December 1 through February (in-water work period) to minimize impacts on upstream migrants. One ladder shall be dewatered at a time, unless coordinated through FPOM.

**1.2.2.3.** Adult fish migration timing has been calculated for The Dalles Dam from count data collected by the Corps since 1957. Table TDA-2 summarizes adult counting periods and peak fish passage timing through 2012. The primary passage period and the earliest and latest peaks of migration recorded are listed for each species (except shad). Peak lamprey migration timing for only the years 2000-2012 appears in this table.

**Table TDA-3. Adult Count Periods and Peak Migration Timing at The Dalles Dam (based on fish count data for years 1957-2012).**

Species	Count Period	Earliest Peak	Latest Peak
Spring Chinook	2/20 – 6/3	4/13	5/13
Summer Chinook	6/4 – 8/3	6/6	8/1
Fall Chinook	8/4 – 12/7	9/2	9/23
Sockeye	2/20 – 12/7	6/20	7/10
Steelhead	2/20 – 12/7	7/9	9/23
Coho	2/20 – 12/7	9/3	10/25
Lamprey*	2/20 – 12/7	7/12	8/1

\*Peak lamprey migration timing based on lamprey count data for years 2000-2012.

## **2. PROJECT OPERATION**

### **2.1. General.**

**2.1.1.** Research, non-routine maintenance, other fish related activities, and construction activities will not be conducted within 100' of any fishway entrance or exit, or within 50' of any other part of the adult fishway, or directly in, above, below, or adjacent to any fishway, unless coordinated by the project, Portland District Operations and/or Planning, or CENWP Construction office through Fish Passage Operation and Maintenance Team (FPOM) and Fish Facility Design and Review Work Group (FFDRWG). Currently coordinated special operations related to research are described in Appendix A. Alternate actions will be considered by district and project biologists in conjunction with the Regional fish agencies on a case by case basis.

**2.1.2.** Emergency situations should be dealt with immediately by the project in coordination with the project or district biologist. If unavailable, the biologists will be informed of steps taken to correct the situation immediately following the incident. All activities within the boat-restricted zone (BRZ) will be coordinated at least 2 weeks in advance with the project, unless it is deemed an emergency (see also **Overview** for coordination guidance.)

**2.1.3.** All fish passage related equipment and operation will be inspected twice daily. Additionally, a 12-hour trend for entrance differential and weir depth will be monitored daily from the data logging system to track operational changes. Results will be reported in the weekly status report.

**2.2. Spill Management.** See the Fish Operations Plan (**Appendix E**) for more information. A summary of the spill patterns is provided in **Table TDA-6**.

**2.3. Total Dissolved Gas Management and Control.** Total dissolved gas (TDG) levels at all projects are monitored in accordance with the TDG Monitoring Plan, included in the Water Management Plan as Appendix 4, and available online at: <http://www.nwd-uc.usace.army.mil/tmt/documents/wmp/2013/>.

**2.3.1.** Excessive TDG levels, which may harm fish, will be controlled to the extent possible, subject to river flow conditions. Control measures will include system spill allocations through the spill priority list issued by Reservoir Control Center (RCC), nighttime or daytime spill limits, and shaping of spill discharge.

## **2.4. Juvenile Fish Passage Facilities.**

### **2.4.1. Operating Criteria.**

#### **2.4.1.1. December 1 through March 31 (Winter Maintenance Period)**

- a.** With the use of an ROV, inspect trashracks and main unit intakes, and if necessary, remove debris from forebay, trashracks, gateway slots, and gateway orifices such that these areas are free of debris on April 1.
- b.** Inspect, lubricate, and test hoist-operated chain gates, end gates, and hoists for operation as needed.
- c.** Inspect and correct any epoxy or concrete deficiencies on the Ice & Trash Sluiceway walls and floors, where accessible.
- d.** Inspect and, where necessary, repair spill gates and control systems. The spillway, except for coordinated changes, must be able to achieve spill patterns on April 1.
- e.** Reinstall or repair avian predator control lines as soon as possible following damage or removal. Install and maintain new avian predator control lines in locations determined to be significantly impacted by avian predators. Avian abatement measures shall be in place by April 1 unless this work is delayed because of inclement weather. If this occurs, the work will be completed as soon as the weather permits after that date. Hazing will be implemented mid-April through July 31. However, there will be no avian abatement measures, other than avian lines, performed from August through mid-April each year.
- f.** December 1 through December 15, see **2.5.1.1.f** and **2.5.1.1.g** for Ice & Trash Sluiceway (ITS) operations for adult fallback and steelhead kelts.
- g.** December 16 through February 28, discontinue operation of the ITS on a 24-hour basis. Close endgate, and open sluice gates 1-1 and 18-3 to allow fish egress from the ITS when equalized with the forebay.

#### **2.4.1.2. April 1 through November 30 (Juvenile Fish Passage Season).**

- a.** Measure gateway drawdown a minimum of once per week, and more frequently, three times per week or more, as needed during high debris periods. Clean trashracks as flow conditions dictate, or when drawdown in gateway slots exceeds 1.5'. Inspect unit 3 (or any other unit 1-5 which minimizes fish impacts), 8 and 18 by ROV between June 1 and

June 15 to determine if there is debris buildup on the trashracks. If so, trashracks will be raked. All trashracks can be raked using the Hammerhead crane.

**b.** Remove debris from the forebay as needed by operating sluiceway.

**c.** Inspect all gatewells daily. Clean gatewells before the gatewell water surface becomes 50% covered with debris. If due to the volume of debris, it is not possible to keep the gatewell surfaces at least 50% clear, they will be cleaned at least once daily. Turbines with a gatewell fully covered with debris will not be operated except to be in compliance with other coordinated fish measures, and then only on a last-on/first-off basis.

**d.** Project maintenance will permanently close the gate slot orifices as the unit intakes are serviced over the next few years, utilizing orifice plates as covers.

**e.** Open ITS gates 1-1, 1-2, and 1-3 over operating Main Unit (MU) 1; sluiceway gate 8-3 over operating MU 8; and sluiceway gates 18-2 and 18-3 over operating MU 18. If any these MUs are out of service, operate the next available MU and associated gates adjacent to the unit (i.e., if MU-1 is OOS, then operate MU-2 w/gates; if MU-18 is OOS, then operate MU-17 w/gates or MU-19 w/gates). The ITS will be operated on a 24-hour basis March 1 through December 15.

**f.** When units are being dewatered, leave endgate open and close sluice gates to expose gatewell orifices, and then install orifice blocker. After orifice-sealing devices are installed, sluice gates should be returned to the open position. Installation time should be approximately 30 minutes.

**g.** Efforts should be made to keep all petroleum out of gatewells. Project environmental section will determine cleanup efforts if needed. Regardless of unit operating status, oil accumulations will be dealt with promptly.

**h.** Reinstall or repair avian predator control lines as soon as possible following damage or removal. Install and maintain new avian predator control lines in locations determined to be significantly impacted by avian predators. Implement avian hazing measures as necessary from April through September only.

**i.** Follow the schedule in **Table TDA-6** for spill. This schedule was developed for juvenile fish passage.

## **2.5. Adult Fish Passage Facilities.**

### **2.5.1. Operating Criteria.**

#### **2.5.1.1. December 1 through February (Winter Maintenance Period).**

**a.** Inspect and calibrate all staff gages and water level indicators. Repair and/or clean where necessary.

- b.** Dewater all ladders and inspect for projections, debris, or plugged orifices that could injure fish or slow their progress up the ladder. Make necessary repairs and complete preventative maintenance.
- c.** Pull exit trashracks and inspect and clear debris from the ladder exits.
- d.** Inspect count station equipment and assure operational. Reinstall picket leads at counting stations prior to watering up the ladders. Ensure the leads are properly seated.
- e.** Only one of the two adult fish facilities may be out of service at any one time unless coordinated through FPOM. The operating facility shall be operated at full fish passage season criteria unless specially coordinated. Outage periods will be minimized to the extent practicable.
- f.** December 1 through December 15, open ITS gates 1-2 and 1-3 over operating MU 1, and gates 18-1 and 18-2 over operating MU 18. If either of these MUs is out of service, operate the next available MU and associated adjacent gates (i.e., if MU-1 is OOS, then operate MU-2 w/gates; if MU-18 is OOS, then operate MU-17 w/gates or MU-19 w/gates). The ITS will be operated on a 24-hour basis December 1 through December 15. *This operation will be implemented on a trial basis and considered for longer term implementation pending review at the comprehensive check-in in 2013.*
- g.** December 16 through February 28, discontinue operation of the ITS on a 24-hour basis. Close endgate and open sluice gates 1-1 and 18-3 to allow fish egress from the ITS when equalized with the forebay.

#### **2.5.1.2. March 1 through November 30 (Adult Fish Passage Season).**

##### **a. All Adult Facilities.**

- 1.** Water depth over fish ladder weirs: 1.0'  $\pm$ 0.1'. During the shad passage season (> 5,000 shad/count station/day/at Bonneville Dam): 1.3'  $\pm$ 0.1'. (See 2.5.1.2.b.2. and 3. for an exception).
- 2.** Water temperatures will be measured in count station of each adult fishway and station service penstock. Temperatures will be recorded in the fishway status report. When water temperature reaches 70°F, all fish handling activities will be coordinated through FPOM prior to any action to verify protocols that will be followed.
- 3.** Head on all entrances: 1' to 2' (1.5' optimum). Refer to **paragraph 3.3.1.**, Routine Maintenance, when unable to achieve head criteria.
- 4.** A water velocity of 1.5 to 4 fps (2 fps optimum) shall be maintained for the full length of the powerhouse collection channel and the lower ends of the fish ladders that are below the tailwater. Fishway channel water velocities will be measured three times weekly, daily preferred, during adult fish passage (Mar 1 – Dec 1) part of the

fishway inspection program. Floats will be timed through all fishway channels that are supplemented by auxiliary water. Results will be provided in the project weekly fishway status report.

**5.** Remove debris as required to maintain head below 0.5' on attraction water intakes and trash racks at all the ladder exits, with a 0.3' maximum head on all picket leads. Debris shall be removed when significant amounts accumulate.

**6.** Necessary staff gauges and water level indicators will be readable at all water levels encountered during the fish passage period and accuracy checked weekly. Instruments will be cleaned and/or recalibrated when necessary, and ASAP.

**7.** Main entrance weir depths: 8' or greater below tailwater. Maintain a minimum tailwater at 70' msl to remain in entrance weir criteria operating range, which is regulated by RCC.

**8.** The current fish counting program is conducted 16 hours per day, from April through October (see **Table TDA-1**). Count station crowders shall remain in the operating position while visual counting and/or videotaping is being conducted.

**A.** The crowder shall be opened to full count slot width when not counting. The crowder shall be open as far as possible to allow accurate counting and shall not be closed to less than 18" while counting. This will usually occur during high turbidity conditions to allow count accuracy criteria to be achieved. Crowder ranges are as follows:

- TDA-East = 20"-34";
- TDA-North = 18"-38".

**B.** If passage is impaired by this condition, the count slot may be widened until proper passage conditions are achieved, even though count accuracy may be compromised to some degree.

**C.** Project biologists, FFU, and the fish count supervisor shall coordinate to achieve optimum count slot passage and/or count accuracy conditions.

**D.** If counting is temporarily discontinued due to unscheduled events, the crowder shall be fully opened.

**E.** The crowder may remain in operating position during the counters' hourly ten-minute break period.

**9.** March 1–March 31, operate the ITS on a 24-hour basis. Open ITS gates 1-2 and 1-3 over operating MU-1, and gates 18-1 and 18-2 over operating MU-18. If either of these MUs is out of service, operate the next available MU and associated adjacent gates (i.e., if MU-1 is OOS, operate MU-2 w/gates; if MU-18 is OOS, operate MU-17 w/gates or MU-19 w/gates).

**b. East Fishway.**

1. Removable weirs #154 -#157 will drop into the ladder at a differential (water surface at respective weir location relative to the forebay) of  $2.5' \pm 0.1'$ .
2. Telescoping weir #159 will adjust to maintain  $1.1 \pm 0.1'$  depth over the weirs, measured below the counting station.
3. Telescoping weir #158 will track  $1' \pm 0.1'$  below weir #159 at all times during fishway operation.

**c. North Fishway Entrance.** Operate one entrance weir—N1. Project biologists will work in conjunction with Wasco County to maintain fishway entrances within established criteria.

**d. Powerhouse.**

1. West Powerhouse Entrance: Operate entrance weirs W1 and W2. W3 will be closed at 81' msl, but remain operational as backup to W1 and W2.
2. East Powerhouse Entrance: Operate entrance weirs E2 and E3 to maintain gate crest  $> 8'$  below tailwater, currently operated at  $13'$  below tailwater. Weir E1 to be closed at 81' msl but will remain operational. At lower range of tailwater elevation, E1 may be operated manually at any depth to provide criteria entrance differential.
3. Operate east ladder junction pool weirs at the following minimum depths in relation to east entrance tailwater surface elevation:
  - JP6..... $>7'$
4. South Spillway Entrance: Operate entrance weirs S1 and S2 to maintain gate crest at  $8'$  or greater below tailwater.
5. Discharge from the two operating fish units will be adjusted to maintain criteria at all associated fishway entrances. Discharge volume will be dependent on criteria levels at entrances.

**3. FACILITY MONITORING AND REPORTING****3.1. Inspections.**

**3.1.1.** The results of all inspections and the readiness of the facilities for operation will be reported to the FPOM at the meeting immediately prior to the fish passage season.

**3.1.2.** During fish passage season, fish passage facilities will be inspected at least twice per day/seven days a week to assure operation according to established criteria. A third inspection

will be made using the data logging system. Entrance conditions for the previous 24 hours will be checked daily for entrance criteria.

**3.1.3.** During winter maintenance season, fish passage facilities will be inspected once per day/at seven days a week.

**3.1.4.** More frequent inspections of some facility components will occur as noted in the text.

**3.1.5.** Additional fishway inspections may be performed by FFU and fish agencies.

**3.2. Zebra Mussel Monitoring.** A zebra mussel monitoring program will continue. These organisms have become a serious problem elsewhere in the country and may become introduced into the Columbia River basin. Inspections should also be made when dewatering all project facilities.

### **3.3. Reporting.**

**3.3.1.** Project biologists shall prepare weekly reports throughout the year summarizing project operations. The weekly reports will provide an overview of how the project and the fish passage facilities operated during the week and an evaluation of resulting fish passage conditions. The reports shall include:

- a. Any out-of-criteria situations observed and subsequent corrective actions taken;
- b. Any maintenance or equipment malfunctions, breakdowns, or damage along with a summary of resulting repair activities;
- c. Adult fishway control calibrations;
- d. STS and VBS inspections;
- e. AWS closures (i.e. cleaning times);
- f. Any unusual activities which occurred at the project which may affect fish passage.

**3.3.2.** The weekly reports shall cover a Sunday through Saturday period and they shall be e-mailed to CENWP-OD and other interested parties as soon as possible the following week, with a copy to CENWD-PDW-R (RCC).

**3.3.3.** The project biologists shall prepare a memo for the record for any negative impact to fish or fishways. This memo will be sent to FPOM by the next working day. Items that shall be included in the memo are:

- a. Time and date.
- b. Nature of activity that lead to fish impact.
- c. Agency responsible for the impact, or the reporter if no responsible party can be identified.
- d. Fish numbers, species, origin, discernible external injuries, tags, etc.
- e. Future actions to avoid a similar impact.
- f. Any relevant photos.

**3.3.4.** The project biologists shall prepare an annual report by January 31, summarizing the operation of the project fish passage facilities for the previous year.

**3.3.4.1.** The report will cover from the beginning of one adult fish facility winter maintenance period to the beginning of the next.

**3.3.4.2.** The annual report also will include a description of all actions taken to discourage avian predation at the project, with an overview of the effectiveness of the activities in discouraging avian predation.

**3.3.4.3.** The annual report will be provided to CENWP-OD in time for distribution to FPOM members at the February meeting.

## **4. FISH FACILITIES MAINTENANCE**

### **4.1. General.**

#### **4.1.1. Routine Maintenance.**

**4.1.1.1.** Staff gages will be installed, cleaned, and/or repaired as required.

**4.1.1.2.** The zebra mussel monitoring program will continue. This includes veliger sampling, colonization sample units, and dewatering inspections. These organisms have become a serious problem elsewhere in the country and may become introduced into the Columbia River basin.

**4.1.1.3.** Routine fishway maintenance, to the extent practicable, will be conducted during periods when passage has been documented to be at its lowest to minimize impacts to migrating salmonids. Maintenance activities that occur during the fish passage period and that may affect fish passage will be reported in the weekly reports.

### **4.2. Juvenile Fish Passage Facilities.**

#### **4.2.1. Routine Maintenance.**

**4.2.1.1. Collection and Transportation Systems.** The Dalles Dam Ice & Trash Sluiceway will receive preventive maintenance throughout the year. During the juvenile fish passage season, this will normally be above water work, such as maintenance of automatic systems, air lines, electrical systems, and monitoring equipment. The system is visually inspected in all accessible areas for damaged equipment and areas that may cause problems to the juvenile fish. Any problem areas identified are repaired and modifications to the channel and general maintenance are completed.

**4.2.1.2. Turbines and Spillways.** Maintenance and routine repair of project turbines and spillways is a regular and recurring process that requires units to be shut down for extended periods (see **Appendix F. Dewatering Plans.**) The schedule for this maintenance is reviewed by the project and district biologists and coordinated within NWP, NWD, BPA, and among fish agencies and tribes through the FPOM. Certain turbine and spillway discharges

at the projects are secondarily used to attract adult fish to the fishway entrance areas. The maintenance schedules for these turbines and spillways will reflect equal weighting given to fish, power, and water management, and will be coordinated with the appropriate resource agencies. No other fish related restrictions regarding maintenance will be placed on any units at this project, except to coordinate research activities. Some types of turbine maintenance will require testing operation of the turbine throughout its full range before returning it to normal service. Units which should receive low priority for scheduling maintenance during the fish passage season are F1, F2, 1, 2, 3, 4, 8, and 18 (during Ice & Trash Sluiceway operation). The trash racks are raked if necessary as determined by ROV inspection just prior to the juvenile fish passage season (April 1), between June 1 and June 15, and whenever trash accumulations are suspected because of increased head across the trash racks.

**4.2.2. Non-Routine Maintenance.** Maintenance of all fish related facilities will be carried out as described below. Unscheduled maintenance that will have a significant impact on juvenile fish passage shall be coordinated through FPOM on a case-by-case basis by project and CENWP-OD biologists. The CENWP-OD biologists will be notified as soon as possible after it becomes apparent that maintenance repairs are required. The Operations Project Manager has the authority to initiate work prior to notifying CENWP-OD when delay of work will result in unsafe situations for people, property, or fish. Information required by CENWP-OD includes: (see also **Overview** for the coordination form):

1. Description of the problem.
2. Type of outage required.
3. Impact on facility operation.
4. Length of time for repairs.
5. Expected impacts on fish passage.

**4.2.2.1. Collection and Transportation Systems.** The Ice & Trash Sluiceway is now being used as a juvenile bypass system.

- a. The chain/hoist gates are fully opened during normal operation. If a chain gate fails, an adjacent gate can be operated until repairs can be made.
- b. If a gate hoist fails, it will be repaired promptly. The gate will be removed when there are problems with the seal and the difficulty cannot be repaired promptly. If the epoxy-lined section of the sluiceway is damaged, it will be repaired.
- c. To prepare a turbine for dewatering, the ice/trash sluiceway can be temporarily closed to install a gatewell orifice plug.

**4.2.2.2. Turbines and Spillways - Spill Gate Failure.** If a spill gate becomes inoperable, the operators will make necessary changes to accommodate spill and then immediately notify the Project Operations supervisor and the project biologist to determine the best pattern to follow until repairs can be made. This interim operation shall be coordinated with FPOM and FFDRWG through the CENWP-OD biologist, who will, depending on coordination, provide additional guidance to the project (see also **2.2. Spill Management**).

### **4.3. Adult Fish Passage Facilities.**

**4.3.1. Routine Maintenance.** Maintenance activities that occur during the fish passage period and that may affect fish passage will be reported in the weekly reports.

**4.3.1.1. Fishway Auxiliary Water Systems.** The Dalles Project fishway auxiliary water is provided by discharge from hydroelectric turbine systems. Preventive maintenance and normal repair occur throughout the year. Trashracks for the AWS intakes will be raked when drawdown exceeds criteria. When practicable, rake trashracks during the time of day when fish passage is least affected.

**4.3.1.2. Powerhouse and Spillway Adult Collection Systems.** Preventive maintenance and repair occurs throughout the year. During the adult fish passage season the maintenance will not involve any operations that will cause a failure to comply with the fishway criteria, unless specially coordinated. Inspection of those parts of the adult collection channel systems, such as diffusion gratings, picket leads, and entrance gates, will be scheduled once per year during the winter maintenance season while the system is dewatered. An inspection during first week of August with the system watered up will also be conducted (see **section 5. Dewatering Plans**). A diver or underwater video system may be used for underwater inspections. Any non-routine maintenance and fishway modification will be handled on a case-by-case basis.

**4.3.1.2.1.** The project fish biologist or alternate Corps fish personnel will attend all dewatering activities potentially involving fish, as well as inspections to provide fish input.

**4.3.1.3. Adult Fish Ladders and Counting Stations.** The adult fish ladders will be dewatered once each year during the winter maintenance period. Unless specially coordinated, only one ladder will be dewatered at a time, with the other ladder capable of operating within criteria. During this time, the ladders are inspected for blocked orifices, projections into the fishway that may injure fish, stability of the weirs, damaged picket leads, exit gate problems, loose diffuser valves, ladder orifice reduction plates, malfunctioning equipment at the counting stations, and other potential problems. Problems identified throughout the passage year that do not affect fish passage, as well as those identified during the dewatered period are then repaired. Trashracks at the ladder exits and the north AWS intake will be raked when criteria are exceeded. Rake trashracks between 1100 and one hour prior to sunset. Fish count station windows will be cleaned when necessary, and when practicable.

**4.3.2. Non-Routine Maintenance.** Maintenance activities that occur during the fish passage period and that may affect fish passage will be reported in the weekly reports. Non-routine maintenance that will significantly affect the operation of a facility, such as repair of displaced diffuser gratings, will be coordinated with the Region, through FPOM. Coordination procedures for non-routine maintenance of adult facilities are the same as for juvenile facilities (paragraph **3.2.2, and Overview section**).

**4.3.2.1. Fishway Auxiliary Water Systems.** Most fishway auxiliary water systems operate automatically. If the automatic system fails, the system will be manually operated by the project personnel until the system is repaired. When this operation becomes necessary, project personnel will increase surveillance on the adult system to ensure that criteria are being met. In the event of AWS failure, FPOM will work with the project to determine the best operating procedure.

**a. Powerhouse.** If one of the two fishway auxiliary water turbines fails or malfunctions for any duration, use the following sequential procedure until a fishway entrance head of 1' is achieved:

1. Increase discharge of remaining operating fish unit to maximum operating capacity.
2. Close entrance weir S1.
3. Raise entrance weir E2 and E3 to 8' depth.
4. Close entrance weir S2 in 1' increments.
5. Close entrance weir W2 in 1' increments.
6. Close entrance weir W1 in 1' increments.
7. Differentials for open entrances should be checked between each of the above steps.

**b.** If both of the fishway auxiliary water turbines fail or malfunction, regardless of fish passage season, the adult fish passage facility will be operated as follows:

1. Raise the south entrance weirs to elevation 81' msl (closed position).
2. Close west entrance.
3. Close entrance weir E1 and E2 and keep E3 at 6' depth

**c. North Ladder.** If the North Wasco County power unit auxiliary water system fails, the backup auxiliary water system will be started and the system operated at criteria. If the backup auxiliary water system fails, N1 will remain open with a weir depth of 6' below the tailwater surface.

**4.3.2.2. Powerhouse and Spillway Adult Fish Collection Systems.** The Dalles Dam contains several types of fishway entrances. In most cases, if failures occur, the entrance will be operated manually by project personnel until repairs are made. If this operation becomes necessary, project personnel will increase surveillance on the adult system to ensure criteria are being met. In those cases in which the failure will not allow the entrance to be operated manually, the gate will be maintained, to the extent possible, in an operational position. If this is not possible, the entrance will be repaired expediently, and it will be returned to manual or automatic control at the earliest possible date.

**4.3.2.3. Adult Fish Ladders and Counting Stations.** The ladder structures include picket leads, counting stations, fishway exits, and overflow weirs with orifices. Picket leads with excessive spacing (greater than 1") erosion of concrete around the picket leads, or missing pickets can allow fish into areas where escape is not likely. If picket lead failure or concrete erosion occurs, then the timing and method of repair will depend upon the severity of the

problem. The decision of whether or not to dewater the fishway and repair any problem will be made in coordination with the fish agencies and tribes through the FPOM.

**4.3.2.4. Diffuser Gratings.** Diffuser chambers for adding auxiliary water to fish ladders and collection channels are covered by gratings attached by several different methods. Diffuser gratings are normally checked during the winter maintenance period to make sure they are in place. These inspections are done by either dewatering the fish passage system and physically inspecting the diffuser gratings, or using underwater video cameras and divers or other methods to inspect the gratings. Diffuser gratings may come loose during the fish passage season due to a variety of reasons. If a diffuser grating is known to or suspected of having moved, creating an opening into a diffuser chamber, close associated diffuser valve ASAP. Efforts must immediately be taken to correct the situation and minimize impacts on adult fish in the fishway. If possible, a video inspection should be made as soon as possible to determine the extent of the problem. If diffuser gratings are found to be missing or displaced, creating openings into the diffuser chambers, a method of repair shall be developed and coordinated with the fish agencies and tribes through the established FPOM coordination procedure. Repairs shall be made as quickly as possible unless coordinated differently.

## **5. TURBINE UNIT OPERATION AND MAINTENANCE**

**5.1.** Through the juvenile fish passage season, April 1 through November 30, *and* from March 1 through March 31 and December 1 through December 15 to aid adult steelhead fallbacks or kelts, either turbine unit 1 or unit 2 or both units will operate during daylight hours unless specially coordinated with FPOM. In order to provide favorable adult fish passage conditions while meeting transmission line needs, the main powerhouse turbine units will operate in the priority outlined in Table TDA-4 below.

**Table TDA-4. Turbine Unit Operating Priorities at The Dalles Dam.**

<b>PERIOD</b>	<b>PRIORITY</b>
<p><b>Fish Passage Season: April 1–November 30</b></p> <p>If additional units needed, operate one unit from each block moving west to east.</p> <p>If additional units still needed, operate one unit from each block moving west to east.</p>	<p><b>1 and/or 2, 3 and/or 4, 8, 18*</b></p> <p>block 5-8, block 9-12, block 13-16, block 17-22</p> <p>block 5-8, block 9-12, block 13-16, block 17-22</p>
<b>December 1–December 15</b>	1 and/or 2, 18 <sup>†</sup>
<b>December 16–February 28</b>	1-22 in any order
<b>March 1–March 31</b>	1 and/or 2, 3 and/or 4, 8, 18 <sup>†</sup>

\*During fish passage season – Unit 1 and/or 2, Unit 3 or 4, Units under open sluice gates 1,8,18

<sup>†</sup> During the March and December operation for adult steelhead fallbacks and kelt passage – Unit 1 and/or 2 and Unit 18 must be operated under at least 2 open sluice gates per unit

**5.2.** The project turbine unit maintenance schedules will be reviewed by project and district biologists for fish impacts and be coordinated with FPOM.

**5.3.** Guidelines for operation of the turbine units within 1% of best efficiency at various head ranges are shown in **Table TDA-5**.

**5.4.** To the extent technically feasible, turbines will be operated within  $\pm 1\%$  of best turbine efficiency from April 1 through October 31 (as specified in the BPA load shaping guidelines). However, during the rest of the year, the project will continue to operate units within the turbine efficiency range, except as specifically requested by BPA to do otherwise as power requirements demand.

**5.5.** When it is necessary to operate turbines outside of the 1% efficiency range, the units will be selected according to the following guidance: Units 7 through 14 will be selected first, spacing by at least one unit. For example, assuming they are available to operate, the following sequence might be used: 7, 9, 11, 13, 15, 5, 2, 1, 8, etc. Since each successive unit in this list is thought to pass more fish, this outage priority sequence is intended to have a lower negative impact on fish during turbine unit passage, if units are taken out of service in this order.

**5.6.** Units may be operationally tested for up to 30 minutes before going into maintenance status by running the unit at speed no load and various loads within the 1% criteria to allow pre-maintenance measurements and testing AND TO ALLOW ALL FISH TO MOVE THROUGH THE UNIT. Units may be operationally tested after maintenance or repair while remaining in maintenance or forced outage status. Operational testing may consist of running the unit for up to a cumulative time of 30 minutes (within 1% criteria) before it is returned to operational status. Operational testing OF UNIT UNDER MAINTENANCE is in addition to a unit in run status (E.G. MINIMUM GENERATION) required for power plant reliability. Operational testing may deviate from fish priority units and may require water that would otherwise be used for spill if the running unit for reliability is at its 1% minimum load. Water will be used from the powerhouse allocation if possible, and water diverted from spill for operational testing will be minimized to that necessary to maintain and assure generation system reliability.

**5.7.** To reduce the chance of debris washing onto the tail log sill during tail log installation in units 19 - 22, fish unit loading may be reduced to about 8 MW for 30 to 60 minutes; and entrance weir E1 may be closed for the same duration of time.

## **6. DEWATERING PLANS**

**6.1.** Guidelines for Dewatering and Fish Handling Plans (**Appendix F**) have been developed by the projects and approved by FPOM, and are followed for most project facilities dewaterings. These plans include consideration for fish safety and are consistent with the following general guidance. The appropriate plans are reviewed by participants before each salvage operation. Dewatering Plans are available online at:

<http://www.nwd-wc.usace.army.mil/tmt/documents/FPOM/2010/>

**6.1.2.** The project fish biologist and/or alternate Corps fish personnel will attend all project activities involving fish handling.

**6.1.3.** The fish agencies and tribes are encouraged to participate in all ladder dewaterings.

**6.2. Juvenile Bypass Systems.** (Not applicable for this Project)

**6.3. Adult Fish Ladder.**

**6.3.1. Routine maintenance.**

**6.3.1.1.** When possible, operate the ladder to be dewatered at orifice flow with the AWS off for at least 24 hours, but not more than 96 hours prior to dewatering.

**6.3.1.2.** A project biologist will assure that fish rescue equipment is available, and will coordinate to ensure adequate numbers of personnel will be available to move fish out of the dewatered ladder.

**6.3.1.3.** Project personnel will install exit bulkheads to shut down ladder flow. Where possible, a minimum flow of 1"-2" will be maintained in the ladder until fish are rescued.

**6.3.1.4.** The project biologist or alternate Corps fish personnel will oversee fish rescue when the ladders are dewatered. The fish are then transported to the forebay or tailwater, depending on the fish life stage (adults to forebay, juveniles to tailrace), for release. If a ladder is dewatered in the spring or summer, identifiable steelhead kelts should be released into the tailrace.

**6.3.1.5.** Orifice blocking devices, with attachment ropes tied to handrails may be placed in the lower-most weirs to prevent fish from re-ascending the dewatered portion of the adult fishway. Use of orifice blocking devices will be at the discretion of the project biologist. The fishway return-to-service checklist is as follows:

- a. Remove orifice blocking devices if used.
- b. Activate automation for systems.
- c. Assure all count station lighting is operational.
- d. Open count station crowder
- e. Close picket leads.
- f. Remove all tools, equipment, and debris from inside ladder.

**6.3.2. Non-Routine Maintenance.**

**6.3.2.1.** When possible, discontinue fishway auxiliary water and operate ladder at reduced flow as long as possible (prefer 3-24 hours) prior to dewatering.

**6.3.2.2.** Follow steps **6.3.1.3.** through **6.3.1.5.** above.

#### **6.4. Powerhouse Collection System Routine Maintenance.**

**6.4.1.** During the pumping or draining operation to dewater a portion or the entire collection channel, the water level will not be allowed to drop so low it strands fish. Personnel shall remain present onsite during pumping operations to ensure stranding does not occur or a water level sensor that de-activates the dewatering process will be used.

**6.4.2.** The project biologist will ensure that rescue equipment is available if needed.

**6.4.3.** The project biologist or alternate Corps fish personnel will provide technical guidance on fish safety and will assist directly in rescue operations.

#### **6.5. Turbines.**

**6.5.1.** Gatewells need not be dipped as is required at other projects due to the lack of VBSs. Immediately before draining it will be operated at speed/no load briefly to flush fish out of the draft tube.

**6.5.2.** If the turbine unit draft tube is dewatered, operate unit with full load for a minimum 15 minutes prior to immediately installing tail logs. If not possible to load, run unit at speed-no-load for minimum 15 minutes. Install bottom two tail logs side-by-side first before stacking the remainder to minimize sturgeon from entering the draft tube before dewatering. This is necessary for both scheduled and unscheduled outages.

**6.5.3.** If a turbine unit is idle and partially dewatered, and tail logs are put into place, an adequate safety pool may be maintained for up to 4 days to accommodate fish trapped in the draft tube (If longer timeframes are needed for the safety pool, project fisheries will coordinate with FPOM on a case-by-case basis). The safety pool will be maintained at an appropriate level which will be determined by the project biologist.

**6.5.4.** Fish rescue personnel will inspect dewatered turbine draft tubes and intakes as soon as the water levels reach a depth permitting visual inspection and the hatch cover is opened. The project biologist or alternate Corps fish personnel will provide technical guidance on fish safety, will assure that rescue equipment is available if needed, and will directly participate in fish salvage.

### **7. FOREBAY DEBRIS REMOVAL**

**7.1.** Debris at projects can impact fish passage conditions. It can plug or block trashracks, gatewell orifices, dewatering screens, separators, and facility piping resulting in impingement, injuries, and descaling of fish. The preferred option is to remove debris at each project when possible to avoid passing a debris problem on to the next project downstream. This is not always possible at each project as some projects do not have forebay debris removal capability. In this case, the only viable alternative is to spill to pass the debris.

**7.2.** Special spill operations that don't follow the normal spill schedule or volume limits will be coordinated prior to their execution. Normally, the project shall contact CENWP-OD at least two workdays prior to the day the special operation is required. Using information provided by the project, CENWP-OD will coordinate with FPOM and with RCC, as necessary. Once the coordination is complete, RCC will issue a teletype detailing the special operations.

## **8. RESPONSE TO HAZARDOUS MATERIALS SPILLS**

The Dalles Project's guidance for responding to hazardous substance spills is contained in its Emergency Spill Response Plan. This guidance will be followed in case of a spill.

**8.1.** Project Fisheries will be contacted as soon as possible after a hazardous material release and prior to any modification to fishway operations. The project biologist will in turn contact the CENWP-OD biologist and FPOM. Attempts should be made to first contact the project biologist on duty. During fish passage season there is a project biologist on duty seven days a week. If a project biologist cannot be reached by radio or in the office, attempts to contact Project Fisheries will occur in the following order:

1. Bob Cordie - home and mobile numbers available in Control Room.
2. Paul Keller - home and mobile numbers available in Control Room.
3. Jeff Randall - home and mobile numbers available in Control Room.
4. Erin Kovalchuk - home and mobile numbers available in Control Room.
5. Bern Klatte (503-808-4318) or Tammy Mackey (503-961-5733).

## **9. ENDNOTES**

Not applicable to this Project.

**Table TDA-5. Turbine Unit Operating Ranges Within 1% of Peak Efficiency for The Dalles Dam Units 1-14 and Units 15-22.**

Head (feet)	Units 1-14				Units 15-22			
	Lower Limit		Upper Limit		Lower Limit		Upper Limit	
	MW	cfs	MW	cfs	MW	cfs	MW	cfs
55	35.1	8,854	44.1	11,108	38.5	9,643	49.3	12,346
56	35.9	8,875	45.1	11,147	39.0	9,554	50.6	12,402
57	36.7	8,894	46.2	11,184	39.4	9,468	51.9	12,454
58	37.5	8,912	47.2	11,219	39.9	9,384	53.2	12,503
59	38.3	8,929	48.3	11,252	40.4	9,302	54.4	12,548
60	39.1	8,945	49.4	11,282	40.8	9,223	55.7	12,590
61	39.5	8,870	50.8	11,415	41.6	9,219	56.8	12,599
62	39.9	8,798	52.3	11,543	42.3	9,215	57.9	12,607
63	40.3	8,728	53.8	11,665	43.0	9,211	58.9	12,613
64	40.7	8,660	55.3	11,783	43.8	9,207	60.0	12,619
65	41.0	8,593	56.8	11,896	44.5	9,202	61.1	12,624
66	41.8	8,614	58.0	11,939	45.1	9,164	62.5	12,719
67	42.6	8,633	59.2	11,980	45.6	9,127	64.0	12,810
68	43.4	8,652	60.3	12,019	46.1	9,091	65.5	12,899
69	44.2	8,670	61.5	12,056	46.7	9,056	66.9	12,984
70	45.0	8,686	62.7	12,092	47.2	9,021	68.4	13,066
71	45.8	8,693	63.7	12,111	47.9	9,019	70.0	13,168
72	46.5	8,700	64.5	12,067	48.6	9,016	70.6	13,105
73	47.2	8,706	65.2	12,024	49.3	9,014	71.3	13,043
74	47.9	8,712	65.9	11,982	50.0	9,011	72.0	12,983
75	48.6	8,717	68.0	12,179	50.7	9,008	76.2	13,542
76	49.1	8,673	69.2	12,226	51.3	8,984	77.8	13,638
77	49.5	8,629	70.4	12,270	51.8	8,960	79.4	13,731
78	49.9	8,587	71.6	12,314	52.4	8,936	81.0	13,821
79	50.4	8,545	72.8	12,356	53.0	8,913	82.6	13,908
80	50.8	8,505	74.0	12,396	53.5	8,891	84.3	13,993
81	51.4	8,493	75.4	12,471	54.2	8,896	85.9	14,092
82	52.0	8,482	76.8	12,543	54.9	8,902	87.5	14,188
83	52.5	8,471	78.2	12,613	55.6	8,908	89.2	14,283
84	53.1	8,460	79.6	12,681	56.3	8,914	90.8	14,375
85	53.7	8,449	81.0	12,748	57.0	8,919	92.4	14,465
86	54.3	8,441	82.5	12,833	57.5	8,898	94.1	14,564
87	54.9	8,433	84.0	12,916	58.0	8,877	95.8	14,660
88	55.5	8,425	85.6	12,997	58.5	8,856	97.4	14,755
89	56.0	8,417	87.1	13,076	59.0	8,836	98.7	14,786
90	56.6	8,409	88.6	13,154	59.5	8,817	98.7	14,602
91	57.3	8,411	89.7	13,236	60.1	8,815	98.7	14,429
92	57.9	8,414	89.7	13,080	60.8	8,813	98.7	14,260
93	58.6	8,416	89.7	12,928	61.4	8,811	98.7	14,094
94	59.2	8,418	89.7	12,779	62.1	8,809	98.7	13,932
95	59.8	8,420	89.7	12,634	62.7	8,808	98.7	13,773

**Note:** Table is based on information provided by HDC in 2001 and 2002 (Table TDA-5 revised 2006).

**Table TDA-6 (page 1 of 4). The Dalles Dam Spill Distribution Pattern – 40% Spill for Juvenile Fish Passage (see footnotes at bottom of table). Table calculated for forebay elevation = 158.5 feet.<sup>1</sup>**

Spillbay Number <sup>2</sup> – Vertical Gate Opening (ft)																							Total Gate Open (ft)	Forebay Elevation = 158.5 feet <sup>1</sup>						
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23		Total Spill (cfs)	Total River Flow (cfs)	Range of Total River Flow		Range of % Spill <sup>3</sup>		See Footnote
																										Low (cfs)	High (cfs)	Low (%)	High (%)	
						4	4																8	11,700	61,700	61,700	62,450	18.7%	19.0%	4
						4.5	4.5																9	13,200	63,200	62,450	63,900	20.7%	21.1%	4
						5	5																10	14,600	64,600	63,900	65,350	22.3%	22.8%	4
						5.5	5.5																11	16,100	66,100	65,350	66,850	24.1%	24.6%	4
						6	6																12	17,600	67,600	66,850	68,300	25.8%	26.3%	4
						6.5	6.5																13	19,000	69,000	68,300	69,750	27.2%	27.8%	4
						7	7																14	20,500	70,500	69,750	71,200	28.8%	29.4%	4
						7.5	7.5																15	21,900	71,900	71,200	72,600	30.2%	30.8%	4
						8	8																16	23,300	73,300	72,600	74,050	31.5%	32.1%	4
						8.5	8.5																17	24,800	74,800	74,050	75,500	32.8%	33.5%	4
						9	9																18	26,200	76,200	75,500	76,950	34.0%	34.7%	4
						9.5	9.5																19	27,700	77,700	76,950	78,400	35.3%	36.0%	4
						10	10																20	29,100	79,100	78,400	79,800	36.5%	37.1%	4
						10.5	10.5																21	30,500	80,500	79,800	81,200	37.6%	38.2%	4
						11	11																22	31,900	81,900	81,200	82,600	38.6%	39.3%	4
						11.5	11.5																23	33,300	83,300	82,600	85,150	39.1%	40.3%	4
						12	12																24	34,800	87,000	85,150	87,375	39.8%	40.9%	
		4	4	4	4	4	4																24	35,100	87,750	87,375	90,000	39.0%	40.2%	
		4.2	4.2	4.2	4.2	4.2	4.2																25.2	36,900	92,250	90,000	95,500	38.6%	41.0%	5
		4.5	4.5	4.5	4.5	4.5	4.5																27	39,500	98,750	95,500	100,625	39.3%	41.4%	5
	4	4	4	4	4	4	4																28	41,000	102,500	100,625	105,000	39.0%	40.7%	
	4.2	4.2	4.2	4.2	4.2	4.2	4.2																29.4	43,000	107,500	105,000	111,375	38.6%	41.0%	5
	4.5	4.5	4.5	4.5	4.5	4.5	4.5																31.5	46,100	115,250	111,375	116,125	39.7%	41.4%	5
4	4	4	4	4	4	4	4																32	46,800	117,000	116,125	120,000	39.0%	40.3%	
4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2																33.6	49,200	123,000	120,000	127,375	38.6%	41.0%	5
4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5																36	52,700	131,750	127,375	134,750	39.1%	41.4%	5

Spillbay Number <sup>2</sup> – Vertical Gate Opening (ft)																							Total Gate Open (ft)	Forebay Elevation = 158.5 feet <sup>1</sup>						
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23		Total Spill (cfs)	Total River Flow (cfs)	Range of Total River Flow		Range of % Spill <sup>3</sup>		See Footnote
																										Low (cfs)	High (cfs)	Low (%)	High (%)	
4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7																37.6	55,100	137,750	134,750	142,000	38.8%	40.9%	5
5	5	5	5	5	5	5	5																40	58,500	146,250	142,000	149,250	39.2%	41.2%	5
5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2																41.6	60,900	152,250	149,250	156,625	38.9%	40.8%	5
5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5																44	64,400	161,000	156,625	163,875	39.3%	41.1%	5
5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7																45.6	66,700	166,750	163,875	171,125	39.0%	40.7%	
6	6	6	6	6	6	6	6																48	70,200	175,500	171,125	178,375	39.4%	41.0%	
6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2																49.6	72,500	181,250	178,375	185,625	39.1%	40.6%	
6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5																52	76,000	190,000	185,625	193,000	39.4%	40.9%	
6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7																53.6	78,400	196,000	193,000	200,375	39.1%	40.6%	
7	7	7	7	7	7	7	7																56	81,900	204,750	200,375	207,625	39.4%	40.9%	
7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2																57.6	84,200	210,500	207,625	214,750	39.2%	40.6%	
7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5																60	87,600	219,000	214,750	221,875	39.5%	40.8%	
7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7																61.6	89,900	224,750	221,875	229,000	39.3%	40.5%	
8	8	8	8	8	8	8	8																64	93,300	233,250	229,000	236,125	39.5%	40.7%	
8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2																65.6	95,600	239,000	236,125	243,375	39.3%	40.5%	
8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5																68	99,100	247,750	243,375	250,625	39.5%	40.7%	
8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7																69.6	101,400	253,500	250,625	257,875	39.3%	40.5%	
9	9	9	9	9	9	9	9																72	104,900	262,250	257,875	265,125	39.6%	40.7%	
9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2																73.6	107,200	268,000	265,125	272,375	39.4%	40.4%	
9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5																76	110,700	276,750	272,375	279,625	39.6%	40.6%	
9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7																77.6	113,000	282,500	279,625	286,625	39.4%	40.4%	
10	10	10	10	10	10	10	10																80	116,300	290,750	286,625	293,625	39.6%	40.6%	
10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2																81.6	118,600	296,500	293,625	300,625	39.5%	40.4%	
10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5																84	121,900	304,750	300,625	307,625	39.6%	40.5%	
10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7																85.6	124,200	310,500	307,625	314,875	39.4%	40.4%	
11	11	11	11	11	11	11	11																88	127,700	319,250	314,875	322,000	39.7%	40.6%	
11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2																89.6	129,900	324,750	322,000	329,125	39.5%	40.3%	
11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5																92	133,400	333,500	329,125	336,375	39.7%	40.5%	

Spillbay Number <sup>2</sup> – Vertical Gate Opening (ft)																							Total Gate Open (ft)	Forebay Elevation = 158.5 feet <sup>1</sup>						
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23		Total Spill (cfs)	Total River Flow (cfs)	Range of Total River Flow		Range of % Spill <sup>3</sup>		See Footnote
																										Low (cfs)	High (cfs)	Low (%)	High (%)	
11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7																93.6	135,700	339,250	336,375	343,500	39.5%	40.3%	
12	12	12	12	12	12	12	12																96	139,100	347,750	343,500	350,500	39.7%	40.5%	
12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2																97.6	141,300	353,250	350,500	357,375	39.5%	40.3%	
12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5																100	144,600	361,500	357,375	364,250	39.7%	40.5%	
12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7																101.6	146,800	367,000	364,250	371,250	39.5%	40.3%	
13	13	13	13	13	13	13	13																104	150,200	375,500	371,250	378,375	39.7%	40.5%	
13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2																105.6	152,500	381,250	378,375	385,375	39.6%	40.3%	
13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5																108	155,800	389,500	385,375	392,250	39.7%	40.4%	
13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7																109.6	158,000	395,000	392,250	399,125	39.6%	40.3%	
14	14	14	14	14	14	14	14																112	161,300	403,250	399,125	406,000	39.7%	40.4%	6
14.2	14.2	14.2	14.2	14.2	14.2	14.2	14.2																113.6	163,500	408,750	406,000	413,000	39.6%	40.3%	
14.5	14.5	14.5	14.5	14.5	14.5	14.5	14.5																116	166,900	417,250	413,000	420,000	39.7%	40.4%	
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7																117.6	169,100	422,750	420,000	433,875	39.0%	40.3%	
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4												121.6	175,000	445,000					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4		4										125.6	180,800	450,800					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4		4	4									129.6	186,700	456,700					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4		4	4		4							133.6	192,500	462,500					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4		4	4		4					4		137.6	198,400	468,400					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4		4	4		4					4	4	141.6	204,200	474,200					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				4		4	4		4					4	4	145.6	210,100	480,100					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		4	4		4					4	4	149.6	215,900	485,900					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		8	4		4					4	4	153.6	221,700	491,700					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		8	8		4					4	4	157.6	227,500	497,500					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		8	8		8					4	4	161.6	233,300	503,300					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		8	8		8					8	4	165.6	239,100	509,100					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		8	8		8					8	8	169.6	245,000	515,000					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				8		8	8		8					8	8	173.6	250,800	520,800					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				12		8	8		8					8	8	177.6	256,500	526,500					

Spillbay Number <sup>2</sup> – Vertical Gate Opening (ft)																							Total Gate Open (ft)	Forebay Elevation = 158.5 feet <sup>1</sup>						
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23		Total Spill (cfs)	Total River Flow (cfs)	Range of Total River Flow		Range of % Spill <sup>3</sup>		See Footnote
																										Low (cfs)	High (cfs)	Low (%)	High (%)	
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				12		12	8		8			8	8	8		181.6	262,200	532,200					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				12		12	12		8			8	8	8		185.6	267,900	537,900					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				12		12	12		12			8	8	8		189.6	273,700	543,700					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				12		12	12		12			12	8	8		193.6	279,400	549,400					
14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7				12		12	12		12			12	12	8		197.6	285,100	555,100					
14.7	14.7	15	15	15	15	15	15				12		12	12		12			12	12	12		203.4	293,300	563,300					
15	15	15.5	15.5	15.5	15.5	15.5	15.5				12		12	12		12			12	12	12		207	298,200	568,200					
15	15	16	16	16	16	16	16				12		12	12		12			12	12	12		210	302,500	572,500					
15	15	16.5	16.5	16.5	16.5	16.5	16.5				12		12	12		12			12	12	12		213	306,700	576,700					
15	15	17	17	17	17	17	17				12		12	12		12			12	12	12		216	310,600	580,600					
15	16	18	18	18	18	18	18				12		12	12		12			12	12	12		223	320,500	590,500					
15	16	19	19	19	19	19	19				12		12	12		12			12	12	12		229	328,400	598,400					
15	16	19	19	19	19	19	19				14		14	14		12			12	12	12		235	336,700	606,700					
15	16	19	19	19	19	19	19				15		15	15		14			12	12	12		240	343,700	613,700					
15	16	19	19	19	19	19	19				16		16	16		16			14	12	12		247	353,400	623,400					
15	16	19	19	19	19	19	19				17		17	17		17			14	12	12		251	358,800	628,800					
15	16	19	19	19	19	19	19				18		18	18		18			12	12	12		253	361,700	631,700					
15	16	19	19	19	19	19	19				19		19	19		19			12	12	12		257	367,000	637,000				7	

1. UPDATE 7/24/12: flow and spill (cfs and %) calculated based on forebay elevation of 158.5 feet. Previous spill pattern tables were based on 1,500 cfs per foot of gate opening, which corresponded to a forebay elevation of 160 feet. Median TDA April-August forebay elevation for the years 2009-2012 is 158.5 feet.
2. The highlighted columns are spillbays that are operationally restricted because of structural or wire rope issues. Highlighted bays will be used only if needed for dam safety.
3. Uniform spill patterns are critical to increasing juvenile fish survival through the tailrace. To accomplish the uniform spill pattern, fixed amounts of spill will occur that result in hourly spill percentages within the ranges shown in the table above.
4. Minimum generation powerhouse requirement = 50 kcfs. 40% spill is not achievable until total river flow is ≥84 kcfs. At total river flow <84 kcfs, spill all flow in excess of the minimum generation requirement.
5. At certain flow ranges, spill could exceed ±1% of the target spill rate of 40%. At total river flows 92,250–161,000 cfs, spill could range from 38.6–41.4% (up to ±1.4% of the 40% rate).
6. At forebay elevation of 160 ft, the maximum gate opening through bays 1-8 is 14 ft (minimum gate opening is 4 ft), thus higher spillbays will be utilized prior to opening any of spillbays 1-8 more than 14.0 ft. At lower forebay elevations, the gate openings can be increased up to 14.7 feet before opening up higher spillbays.
7. If gate openings greater than shown in table above are needed, to the extent feasible, incrementally increase gate openings. If all available spillbays are fully open and more flow is needed to limit pool surcharge, use restricted spillbays in following priority order: 10, 11, 13, 16, 18, 19, and 23. Fully open each bay as needed before moving to next.

**Table TDA-6. Spillway Configuration at Various Flow Ranges.**

Min Flow (cfs)	Max Flow (cfs)	Spillbay Gates	Gate Opening per Bay (ft)	Total Gate Opening (ft)	Total Spill (cfs)
62,000	65,000	7,8	4	8	12,000
65,000	71,000	7,8	6	12	18,000
71,000	77,000	7,8	8	16	24,000
77,000	85,000	7,8	10	20	30,000
85,000	97,500	7,8	12	24	36,000
85,000	97,500	1-8	4	24	36,000
97,500	112,500	1-8	4	28	42,000
112,500	127,500	1-8	4	32	48,000
127,500	142,500	1-8	4.5	36	54,000
142,500	157,500	1-8	5	40	60,000
157,500	172,500	1-8	5.5	44	66,000
172,500	187,500	1-8	6	48	72,000
187,500	202,500	1-8	6.5	52	78,000
202,500	217,500	1-8	7	56	84,000
217,500	232,500	1-8	7.5	60	90,000
232,500	247,500	1-8	8	64	96,000
247,500	262,500	1-8	8.5	68	102,000
262,500	277,500	1-8	9	72	108,000
277,500	292,500	1-8	9.5	76	114,000
292,500	307,500	1-8	10	80	120,000
307,500	322,500	1-8	10.5	84	126,000
322,500	337,500	1-8	11	88	132,000
337,500	352,500	1-8	11.5	92	138,000
352,500	367,500	1-8	12	96	144,000
367,500	382,500	1-8	12.5	100	150,000
382,500	397,500	1-8	13	104	156,000
397,500	412,500	1-8	13.5	108	162,000
412,500	438,000	1-8	14	112	168,000